
Data sheet no. DenA2544X1000

Complete monitoring system for the automatic, continuous measurement of chlorine and other disinfectants (e.g. monochloramine) in potable water, swimming pools, cooling water, hot water loops and effluent.

Monitor AMI Codes-II

- For the continuous online determination of disinfectants based on the DPD colorimetric method (EN ISO 7393-2; APHA 4500 CI-G).
- Measurement values: free chlorine / chlorine dioxide / iodine or bromine using DPD+Buffer or monochloramine / ozone using DPD+Buffer&KI, flow and if installed pH and temperature.
- Also applicable for water containing additives like cyanuric acid.
- Complete system including measurement and control electronics, photometer, flow indicator, reaction chamber, reagent dosing system and reagent containers.
- Integrated pH measurement with temperature compensation (available as option).
- All usual dosing devices for disinfectants and pH control can be connected either through relays or analog output signals. Two independent controllers can operate simultaneously.
- Dosing of disinfectant can be interrupted automatically with an external signal, e.g. during sample flow interruption or filter backwashing.
- Two (optionally three) selectable measurement values are available as analog output signals.
- Alarm display and activation of alarm relay when user defined, critical limits for a measurement value are reached.
- Continuous, automatic monitoring of main instrument functions (dirty photometer, sample flow, reagents).
- Large back-lit LCD display showing all measured values and status information simultaneously.
- Factory tested, ready for installation and operation.

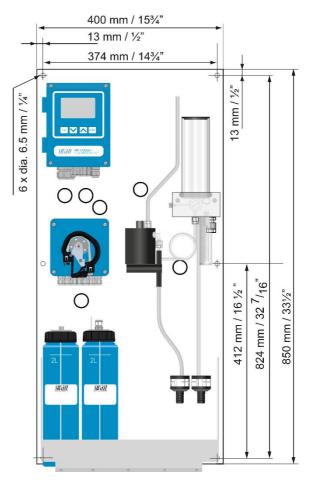

Options:

- Communication interface
- pH option containing pH sensor, temperature sensor, cables and electronics board.

Accessory:

 Chemical cleaning module. For details please see separate data sheet no. DenA82312000.

Order Nr.	Monitor AMI Codes-II AC	A-25.441.100.0
	Monitor AMI Codes-II DC	A-25.442.100.0
Option:	[] 3 rd current signal output (0/4 – 20mA)	A-81.420.050
	[] Profibus DP & Modbus RTU interface (RS-485)	A-81.420.020
	[] USB interface	A-81.420.042
	[] HART interface	A-81.420.060
Option:	[] pH and temperature measurement	A-87.127.020

Monitor AMI Codes-II

Data sheet no. DenA2544X1000

Measuring range: Accuracy:

Ozone

0.05 - 1.00 ppm ± 0.01 ppm

HOCI, free chlorine, monochloramine

0.00 - 1.00 ppm \pm 0.01 ppm 1.00 - 3.00 ppm \pm 0.06 ppm 3.00 - 5.00 ppm \pm 0.2 ppm

Chlorine dioxide, iodine, bromine

0.00 - 2.00 ppm ± 0.02 ppm 2.00 - 6.00 ppm \pm 0.12 ppm

Response time:

90% of change of excessive CI in 60 seconds after sample entered flow cell.

Cycle time free chlorine:

pH (option):

Measuring range: pH 2 - 12 Resolution: 0.01 pH

Temperature measurement (Option)

with Nt5k sensor

-30 to +100 °C Measuring range: Resolution: 0.1 °C

Functionality

Electronics case: Cast aluminum IP 66 / NEMA 4X Protection degree: Display: backlit LCD, 75 x 45 mm Electrical connectors: screw clamps Ambient temperature: -10 to +50 °C -25 to +65 °C Limit range of operation: Storage and transport: -30 to +85 °C Humidity: 10 to 90 % relative. non condensina

Power supply

Voltage:

AC version: 100 - 240 VAC (\pm 10 %),

50/60 Hz (± 5 %)

DC version: 10-36 VDC Power consumption: max. 35 VA

Operation

Easy operation based on separate menus for "Messages", "Diagnostics", "Maintenance", "Operation" and "Installation" User menus in English, German, French,

Spanish and Turkish.

Separate, menu specific password protection.

Display of process value, alarm status and time during operation.

Storage of event log, and alarm log and calibration history.

Storage of the last 1'500 data records in logger with selectable time interval.

Safety features


No data loss after power failure, all data is saved in non-volatile memory. Over-voltage protection of in- and outputs.

and signal outputs.

Transmitter temperature monitoring

With programmable high/low alarm limits.

Electrical Connection Scheme

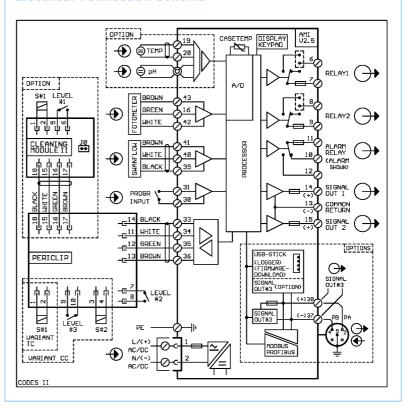

Real-time clock with calendar

For action time stamp and preprogrammed actions

1 Alarm relay

One potential free contact for summary - USB interface alarm indication for programmable alarm - HART interface values and instrument faults.

Maximum load: 1A / 250 VAC

One input for potential-free contact. Programmable hold or remote off function.

2 Relay outputs

Two potential-free contacts programmable as limit switches for measuring values, controllers or timer with automatic hold func-

1A / 250 VAC Rated load:

2 Signal outputs (3rd optional)

Two programmable signal outputs for measured values (freely scaleable, linear or bilinear) or as continuous control outputs Panel (control parameters programmable) as cur- Panel dimensions: rent source. 3rd signal output selectable as Panel material: current source or current sink.

0/4 - 20 mA Current loop: Maximum burden:

Control functions

Relays or current outputs programmable Galvanic separation of measuring inputs for 1 or 2 pulse dosing pumps, solenoid valves or for one motor valve.

Programmable P, PI, PID or PD control pa-

1 Communication interface (option)

- RS485 interface (galvanically separated) with Fieldbus protocol Modbus RTU or Profibus DP
- 3rd Signal output

Monitor Data

Sample conditions

min. 10 l/h Water consumption: Water inlet pressure 0.15 to 2 bar Sample temperature: 5 to 50 °C

Flow cell and connections

Made of acrylic glass with water inlet filter and needle valve.

Openings for pH and temperature sensors. Inlet tubing: 6 x 8 mm Outlet pressure: atmospheric drain Outlet tubing: 15 x 20 mm (1/2")

400 x 850 x 200 mm **PVC** Weight: 12.0 kg